




Sign #	Sign Type	Detail	Sign Message	Notes
001	Room ID	AS-3.0/1	ELEVATOR MACHINE ROOM	
002	Room ID	AS-3.0/1	ELECTRICAL ROOM	
003	Room ID	AS-3.0/1	ELECTRICAL ROOM	
004	Hoistway ID	AS-3.0/2	В	
004	Hoistway ID	AS-3.0/2	В	
005	Exit Stair Up	AS-3.0/3	EXIT STAIR UP	
006	Evacuation Plan	AS-3.0/4	IN FIRE EMERGENCY DO NOT USE ELEVATOR. USE EXIT STAIRS	
007	Floor ID	AS-3.0/5	В	
800	Stair ID	AS-3.0/6	STAIR 1 - NO ROOF ACCESS - B - B THRU 3 - EXIT UP TO LEVEL 1	
009	Exit Stair Up	AS-3.0/3	EXIT STAIR UP	
010	Evacuation Plan	AS-3.0/4	IN FIRE EMERGENCY DO NOT USE ELEVATOR. USE EXIT STAIRS	
011	Floor ID	AS-3.0/5	В	
012	Stair ID	AS-3.0/6	STAIR 2 - NO ROOF ACCESS - B - B THRU 3 - EXIT UP TO LEVEL 1	
013	Room ID	AS-3.0/1	GENERATOR	

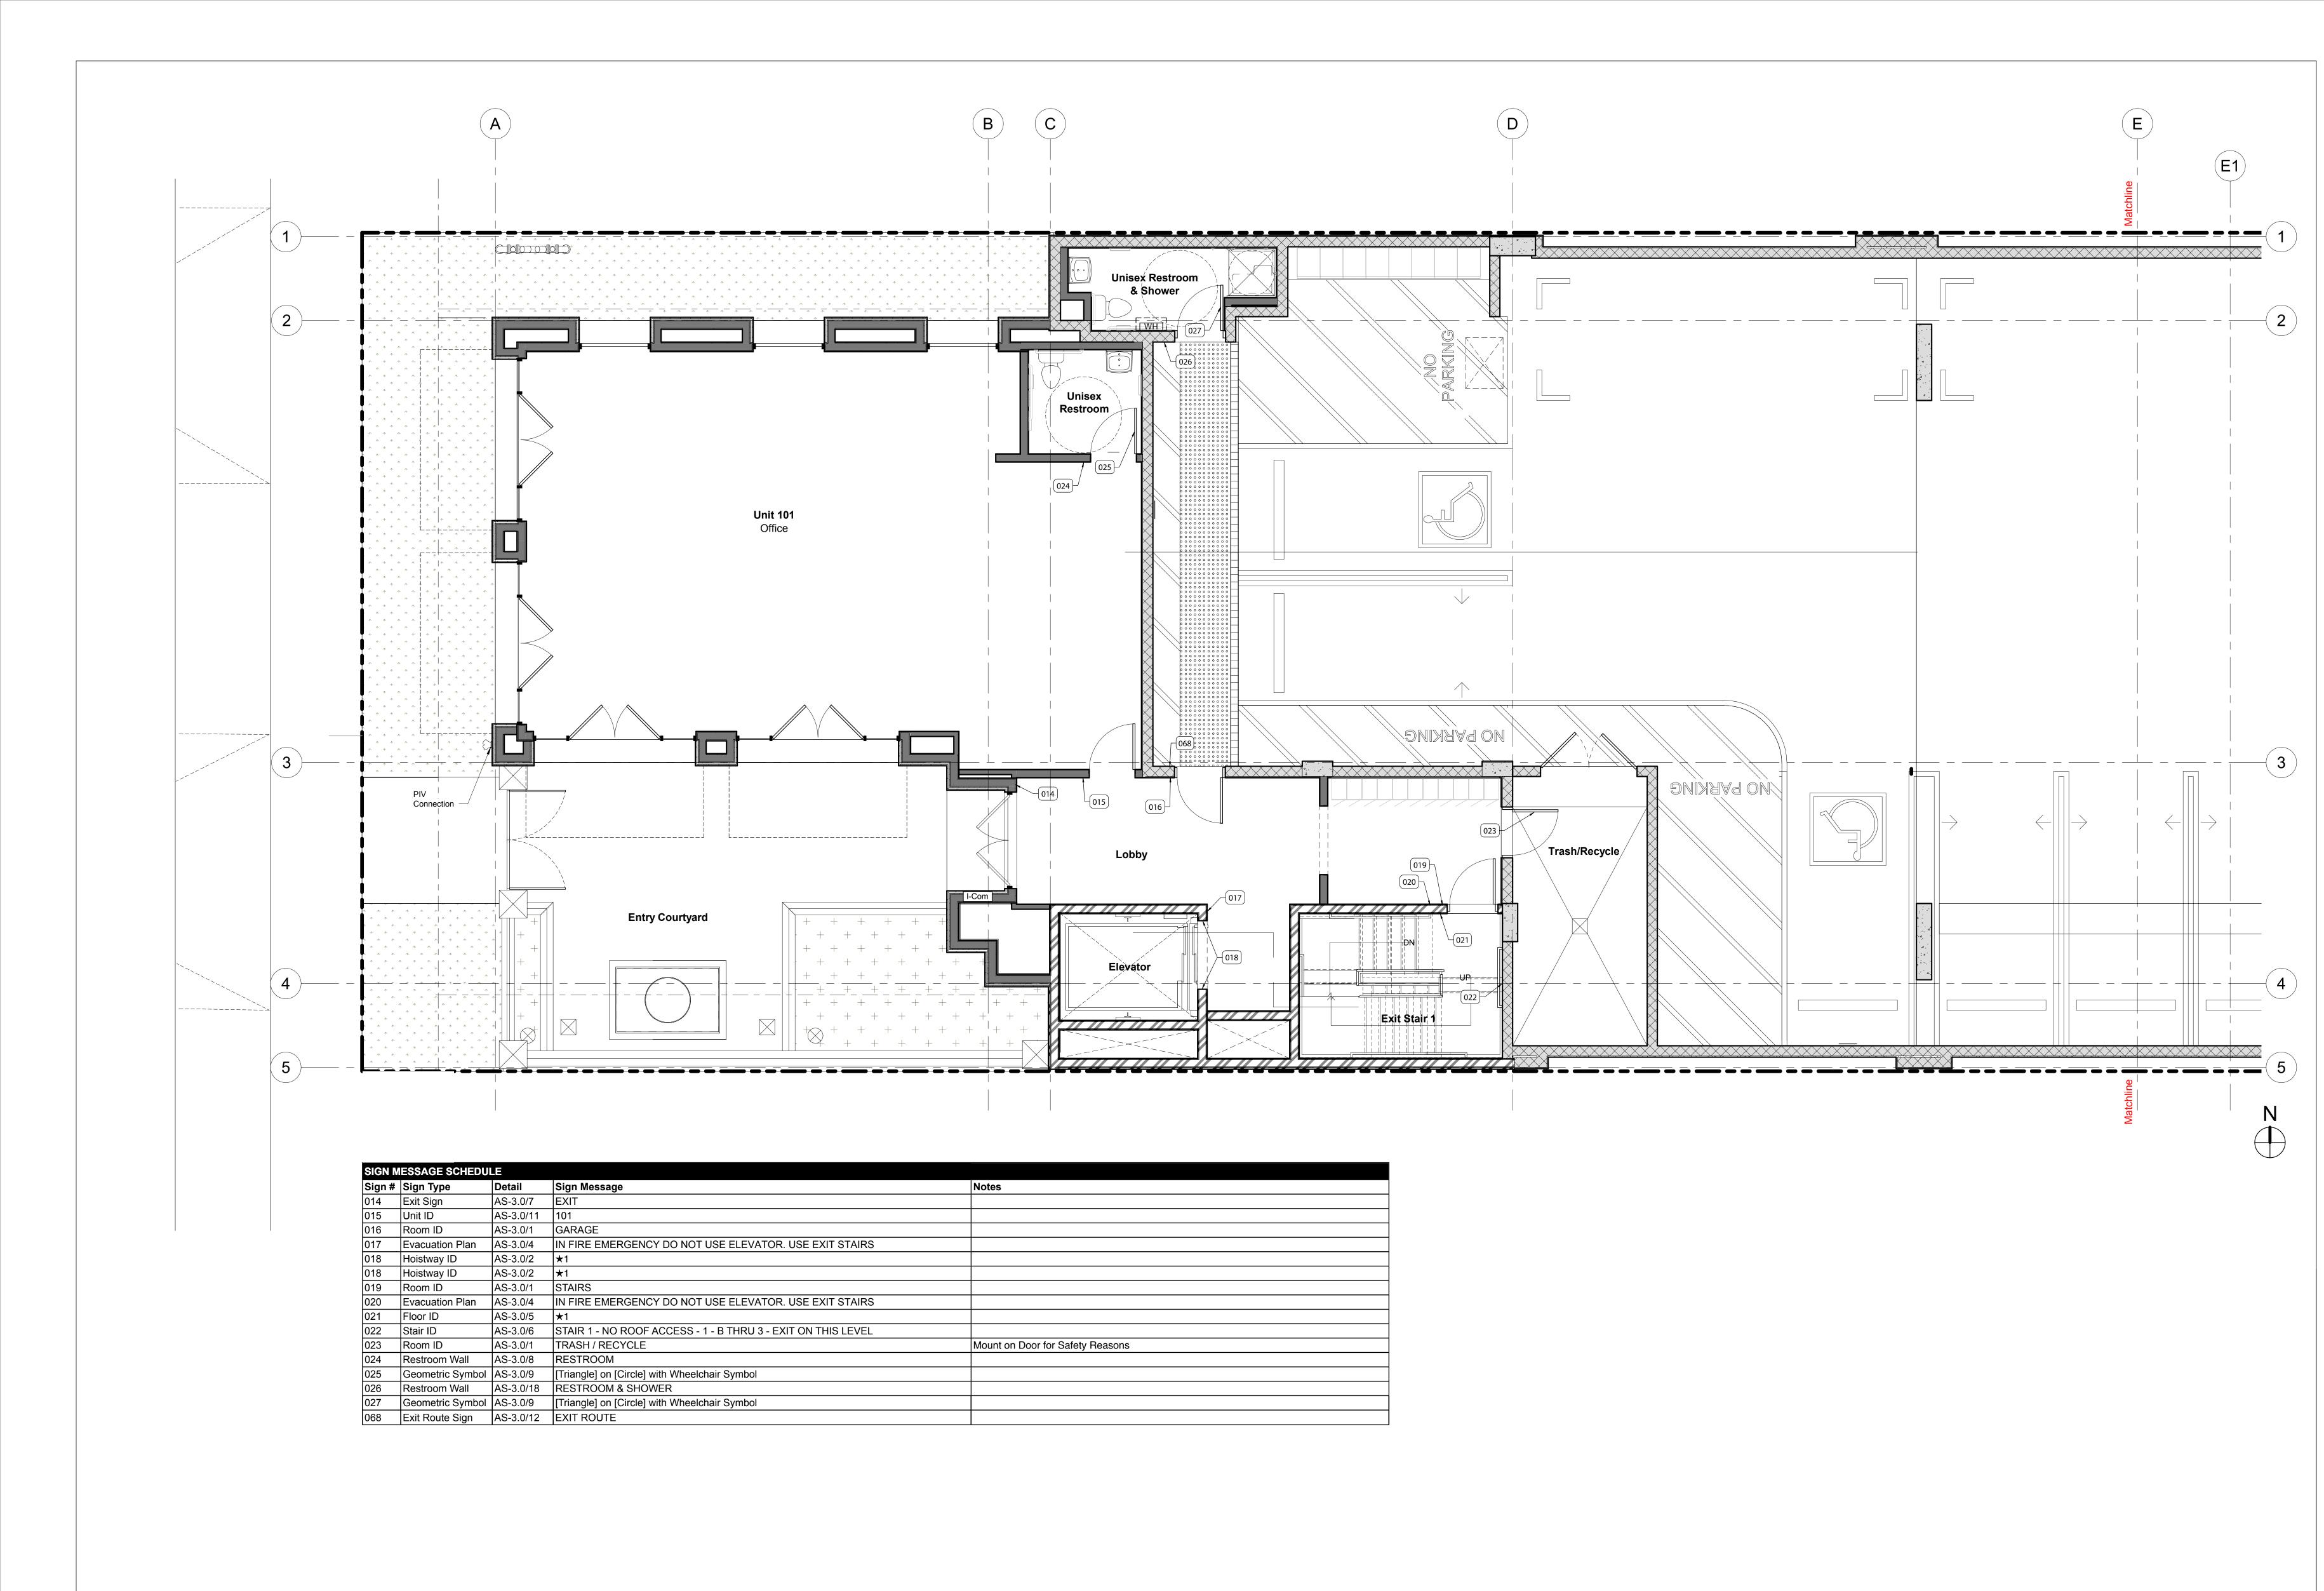


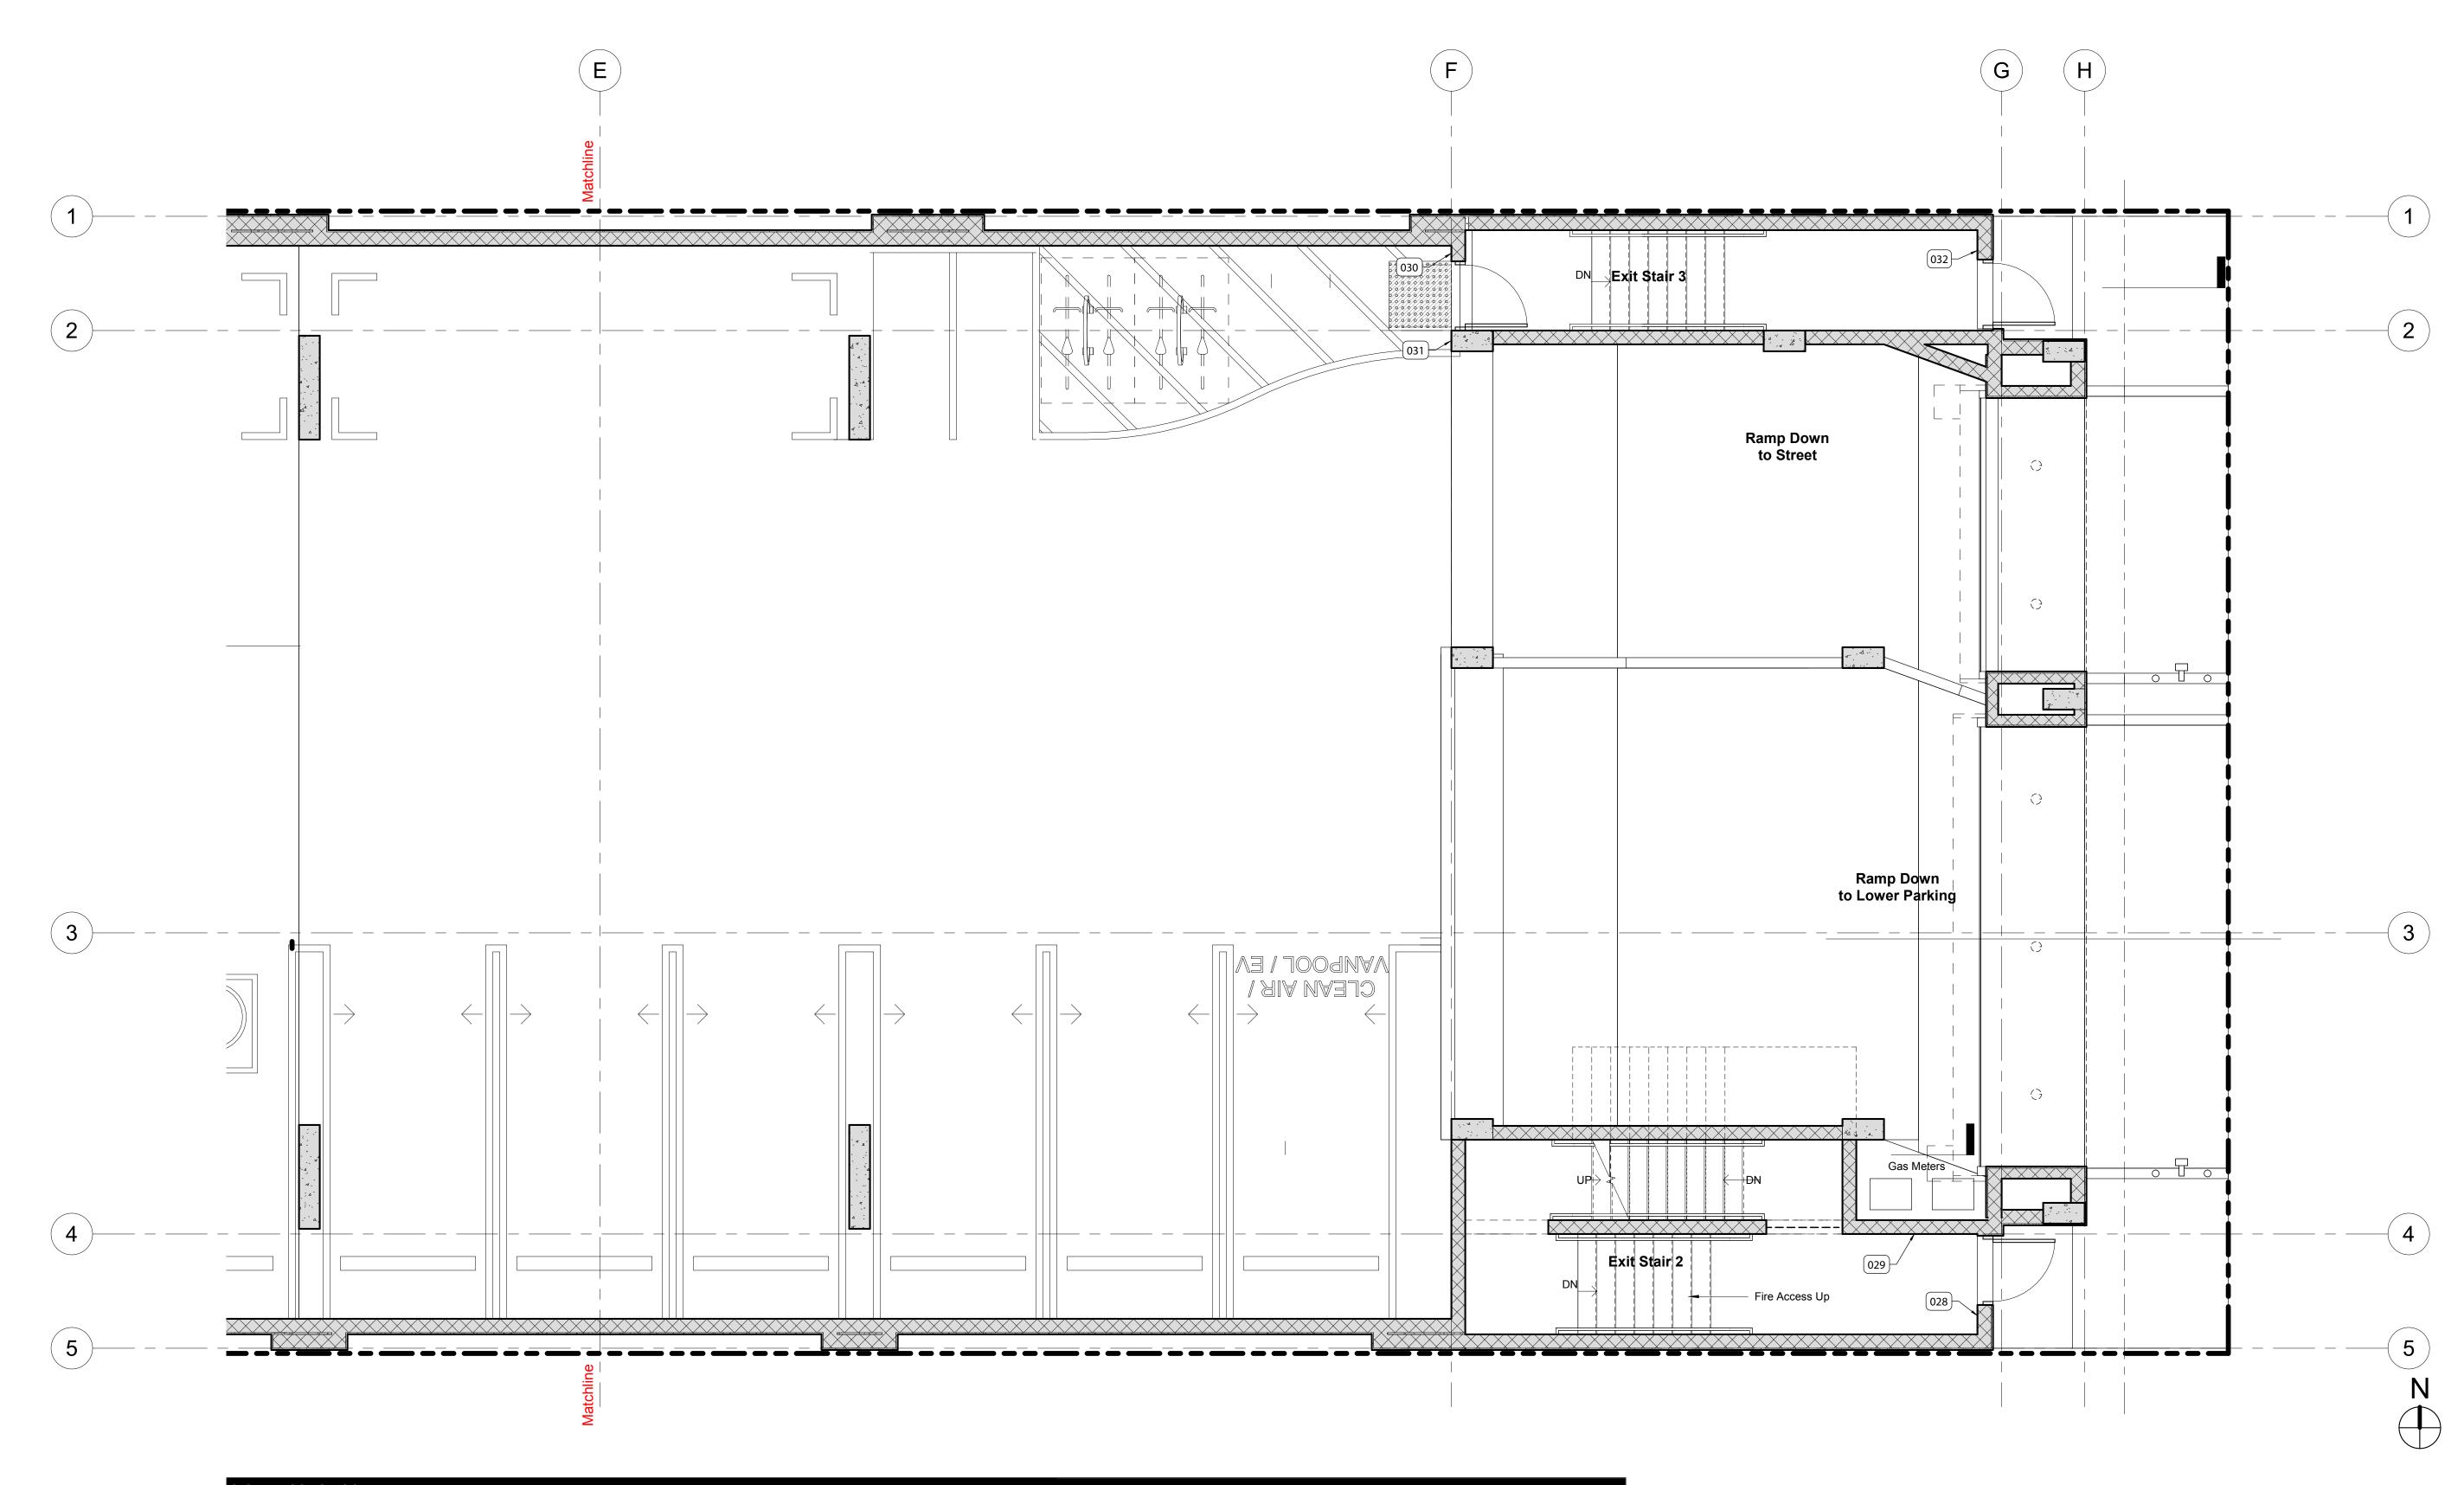


Sign #	Sign Type	Detail	Sign Message	Notes
028	Exit Sign	AS-3.0/7	EXIT	
029	Stair ID	AS-3.0/6	STAIR 2 - NO ROOF ACCESS - 1 - B THRU 3 - EXIT ON THIS LEVEL	
030	Exit Stair Down	AS-3.0/10	EXIT STAIR DOWN	
031	Evacuation Plan	AS-3.0/4	IN FIRE EMERGENCY DO NOT USE ELEVATOR. USE EXIT STAIRS	
032	Exit Sign	AS-3.0/7	EXIT	

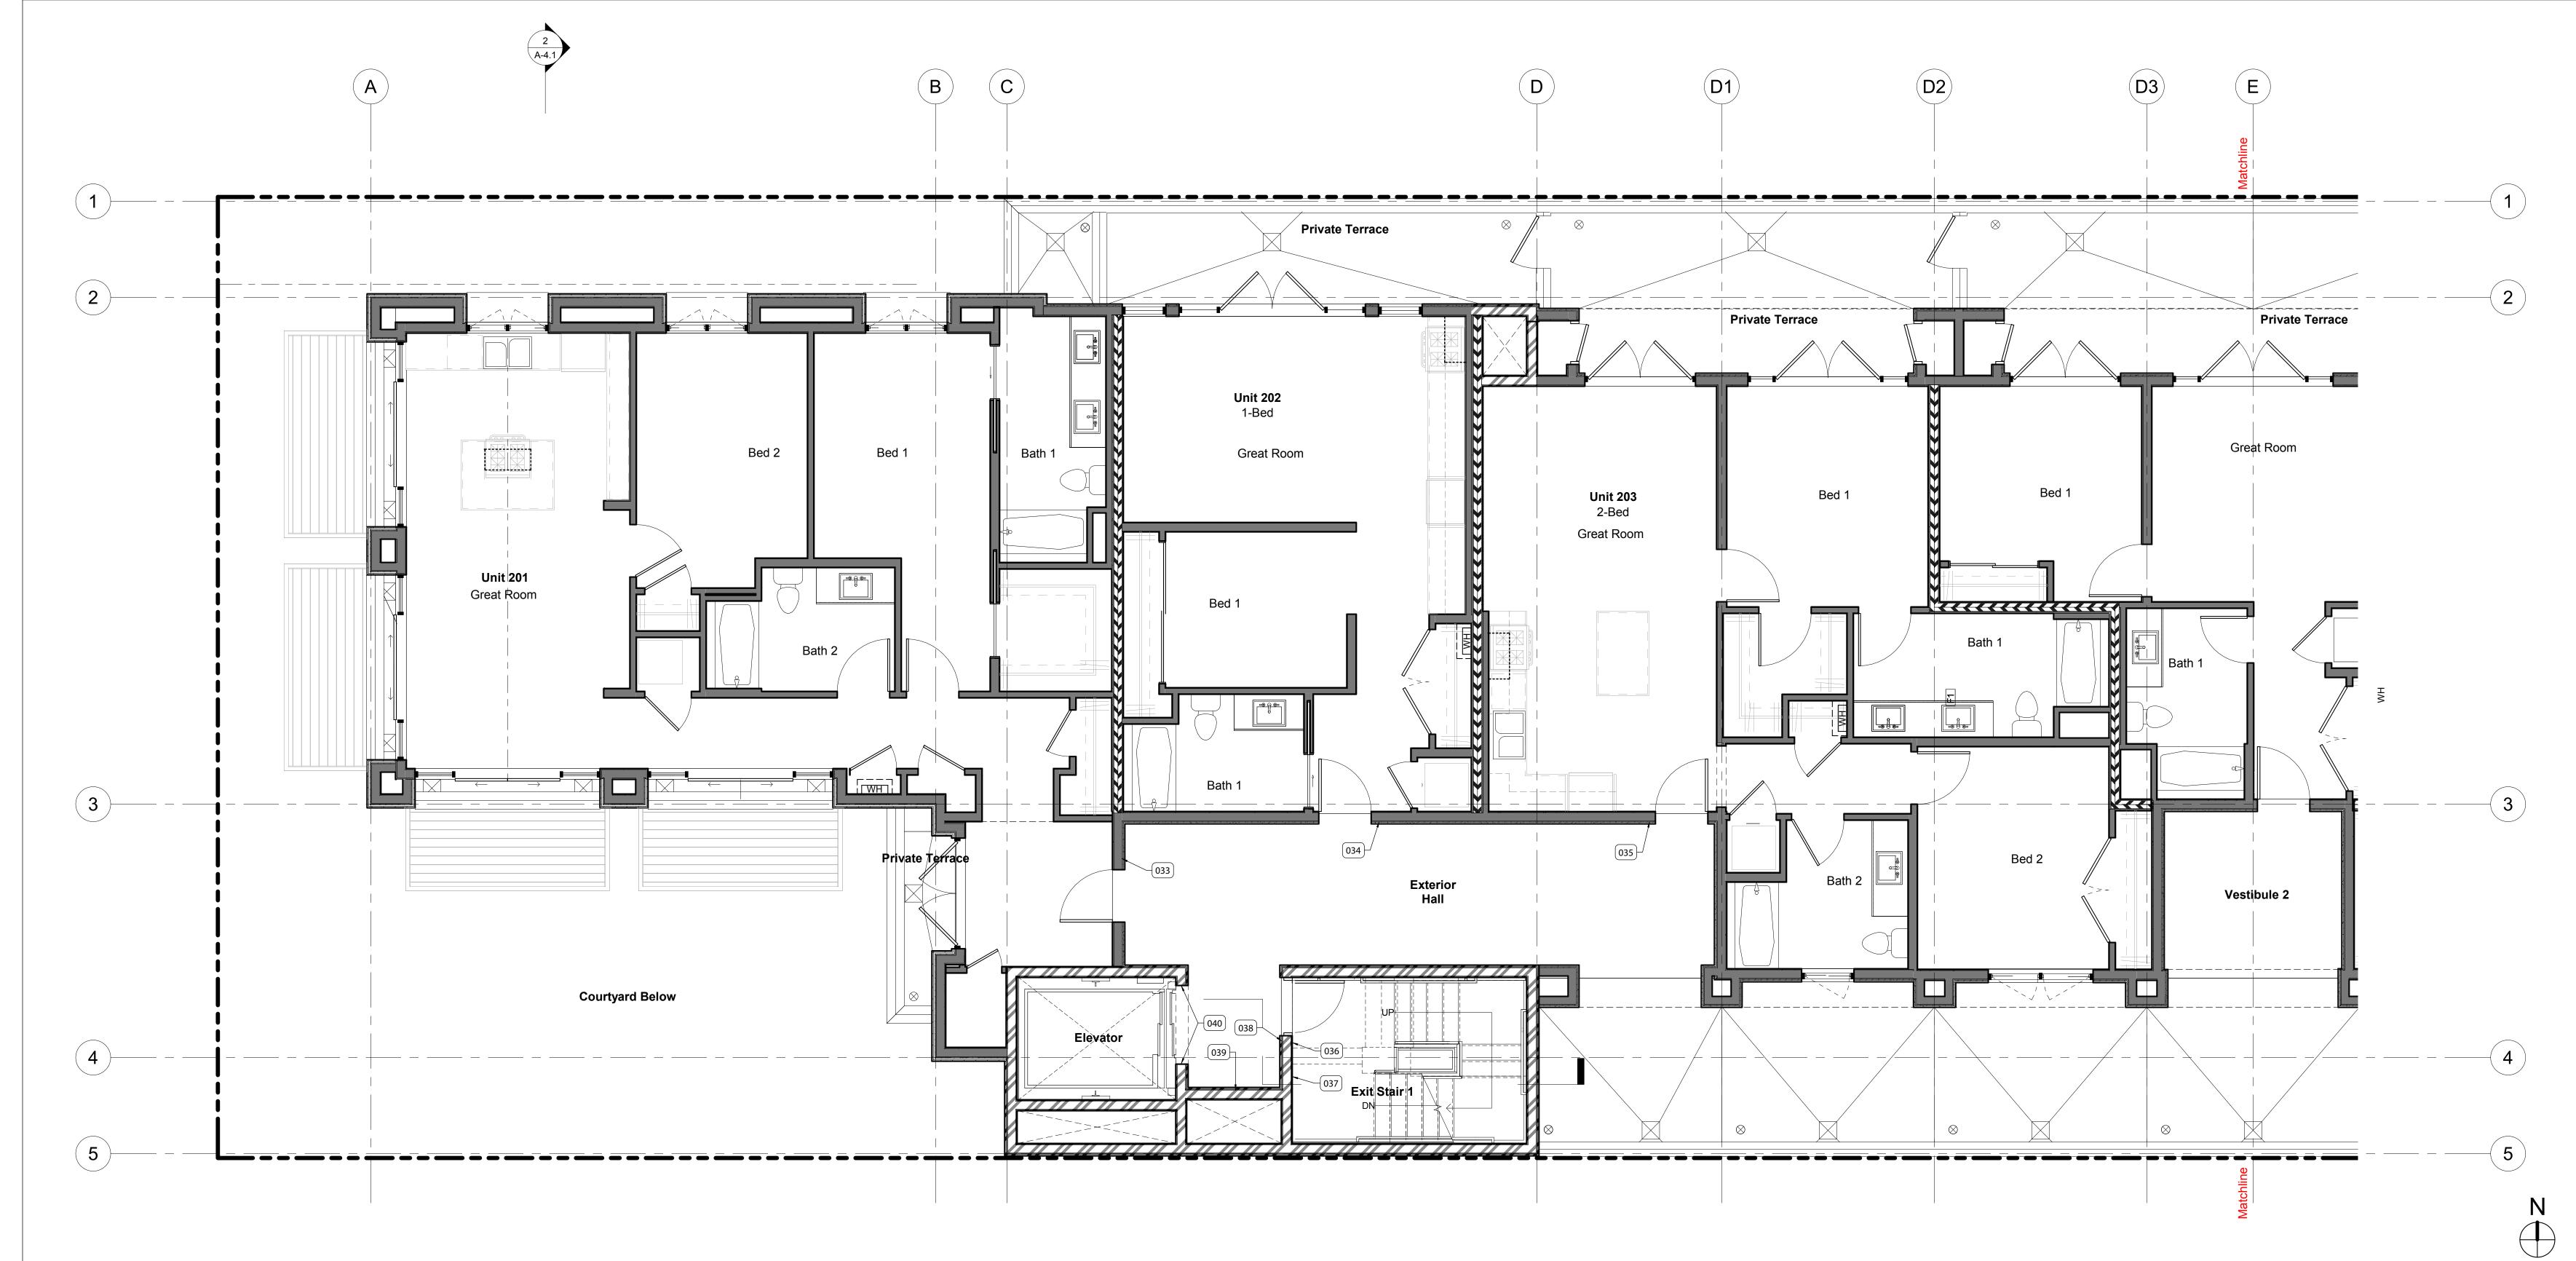


SIGN M	SIGN MESSAGE SCHEDULE				
Sign #	Sign Type	Detail	Sign Message	Notes	
033	Unit ID	AS-3.0/11	201		
034	Unit ID	AS-3.0/11	202		
035	Unit ID	AS-3.0/11	203		
036	Floor ID	AS-3.0/5	2		
037	Stair ID	AS-3.0/6	STAIR 1 - NO ROOF ACCESS - 2 - B THRU 3 - EXIT DOWN TO LEVEL 1		
038	Exit Stair Down	AS-3.0/10	EXIT STAIR DOWN		
039	Evacuation Plan	AS-3.0/4	IN FIRE EMERGENCY DO NOT USE ELEVATOR. USE EXIT STAIRS		
040	Hoistway ID	AS-3.0/2	2		
040	Hoistway ID	AS-3.0/2	2		

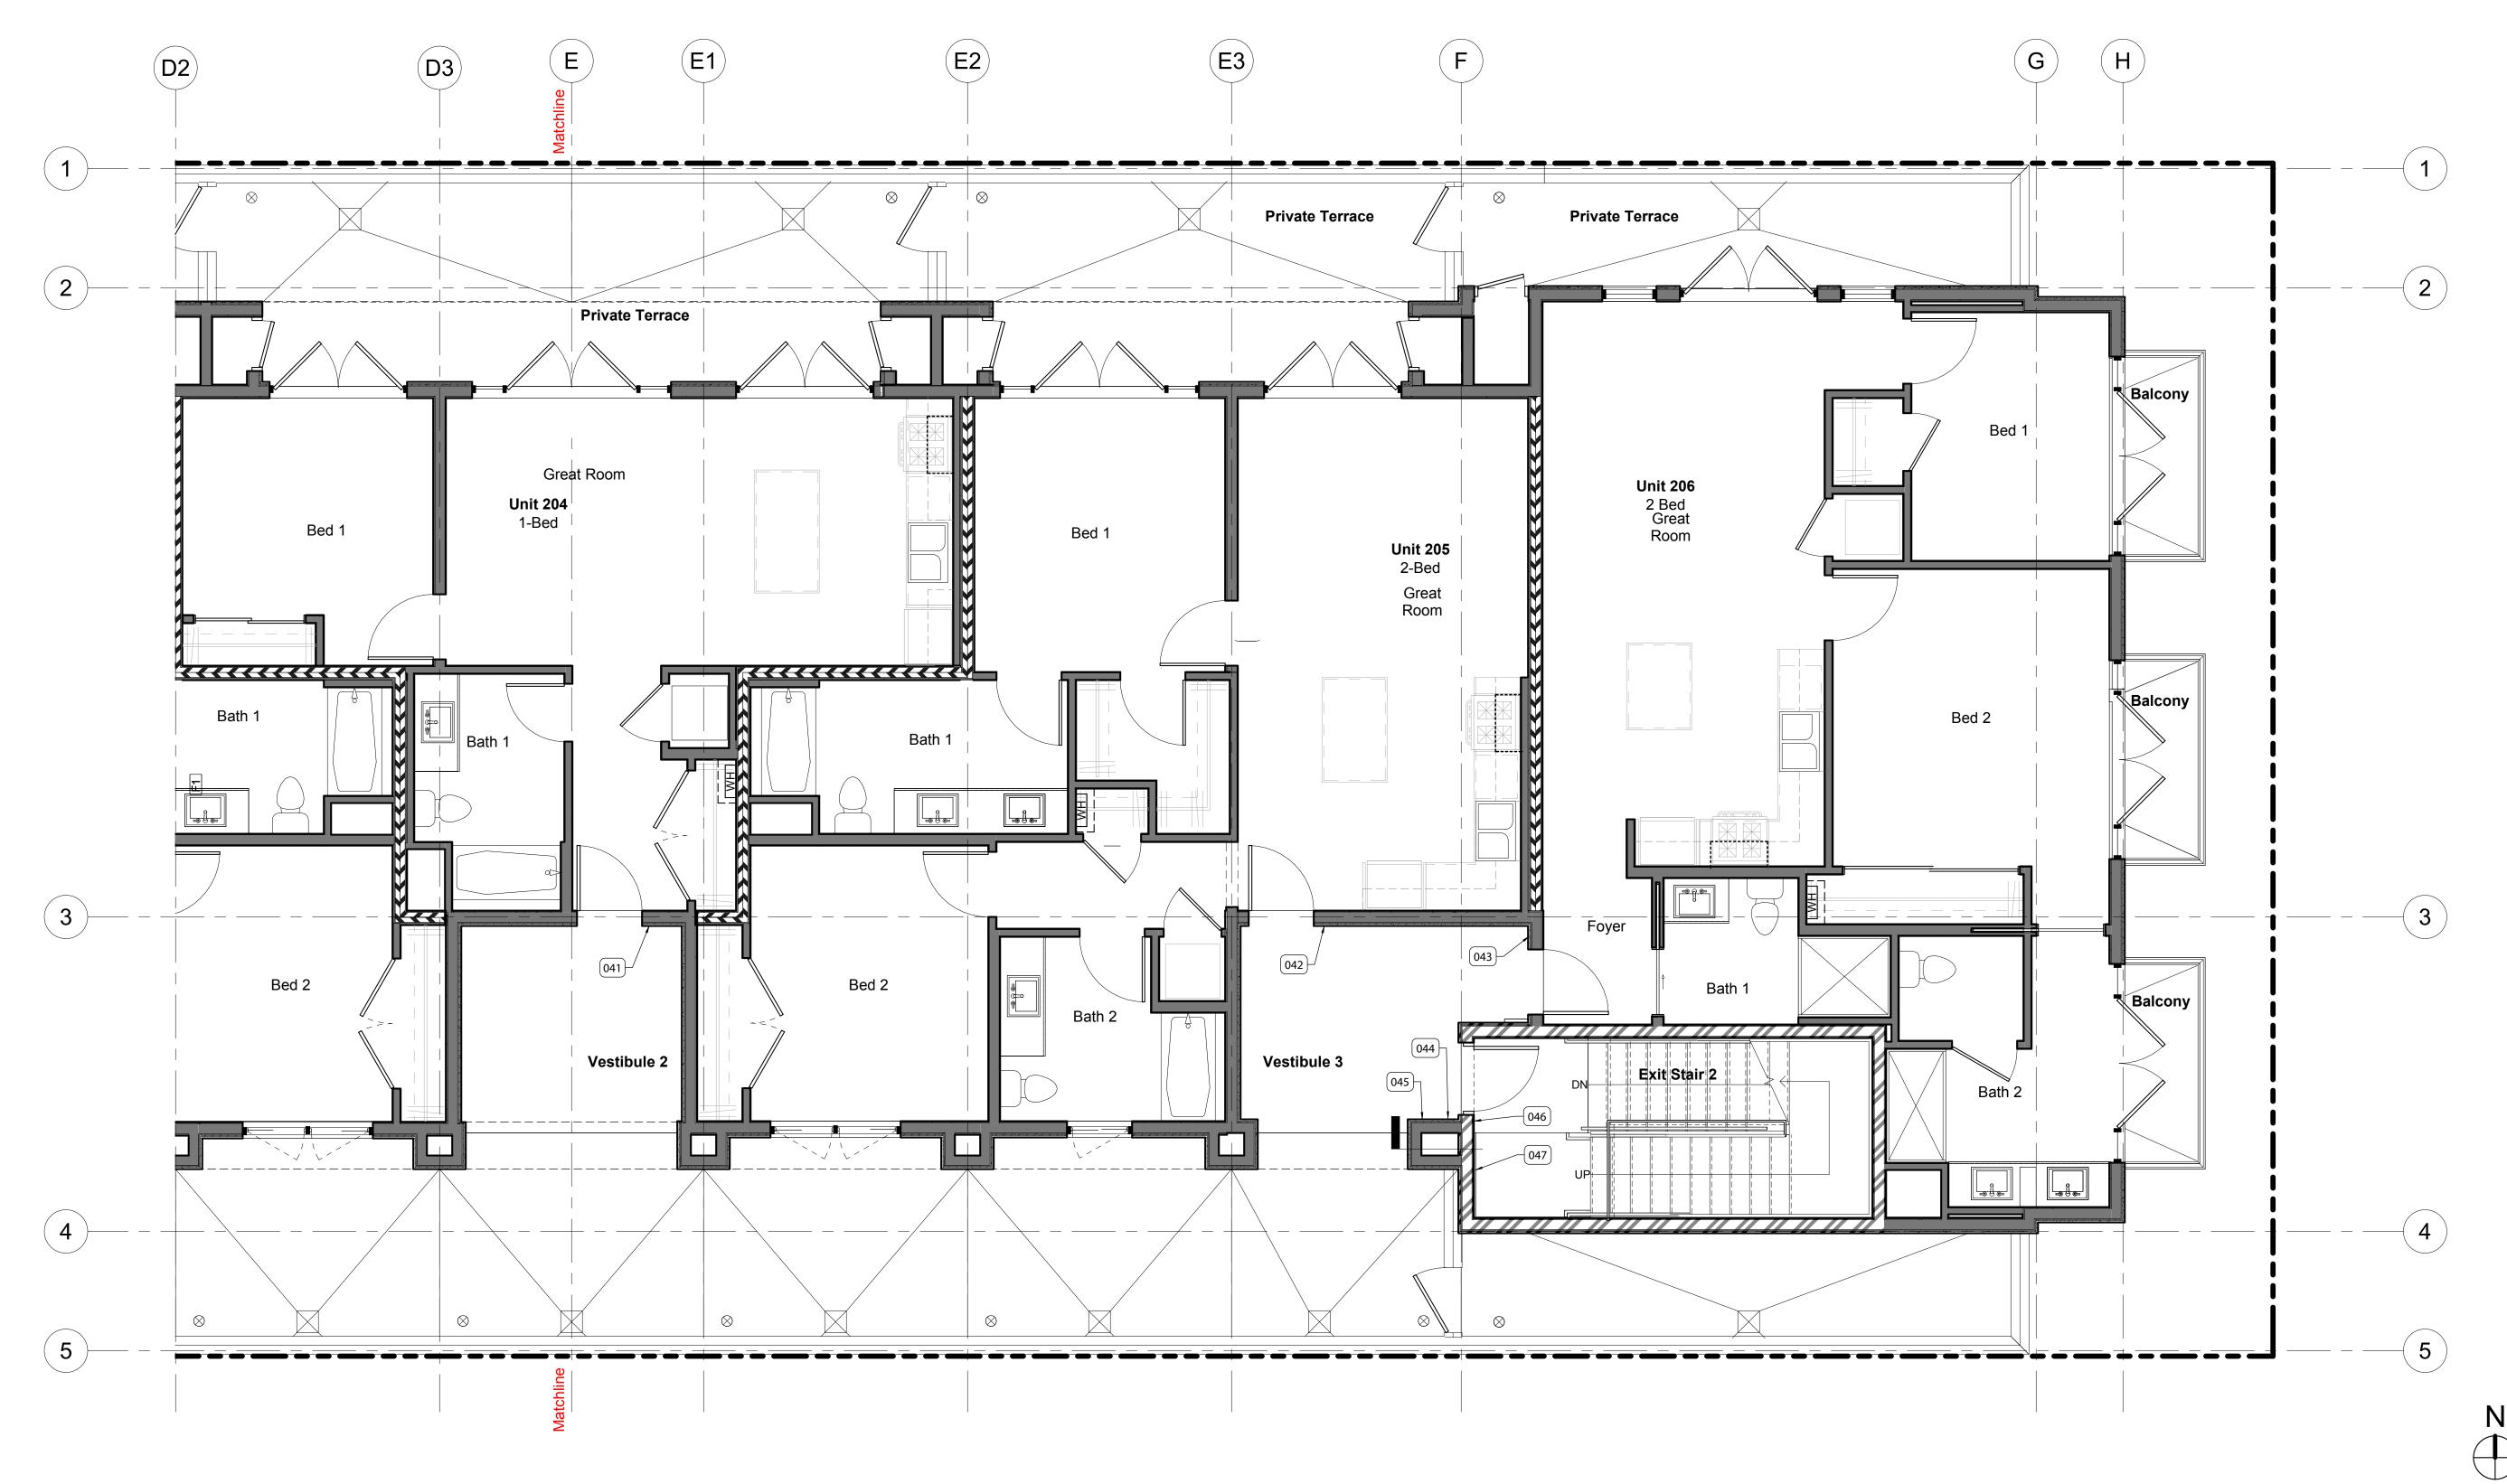

SIGN MESSAGE SCHEDULE						
Sign #	Sign Type	Detail	Sign Message	Notes		
041	Unit ID	AS-3.0/11	204			
042	Unit ID	AS-3.0/11	205			
043	Unit ID	AS-3.0/11	206			
044	Exit Stair Down	AS-3.0/10	EXIT STAIR DOWN			
045	Evacuation Plan	AS-3.0/4	IN FIRE EMERGENCY DO NOT USE ELEVATOR. USE EXIT STAIRS			
046	Floor ID	AS-3.0/5	2			
047	Stair ID	AS-3.0/6	STAIR 2 - NO ROOF ACCESS - 2 - B THRU 3 - EXIT DOWN TO LEVEL 1			
•			·			

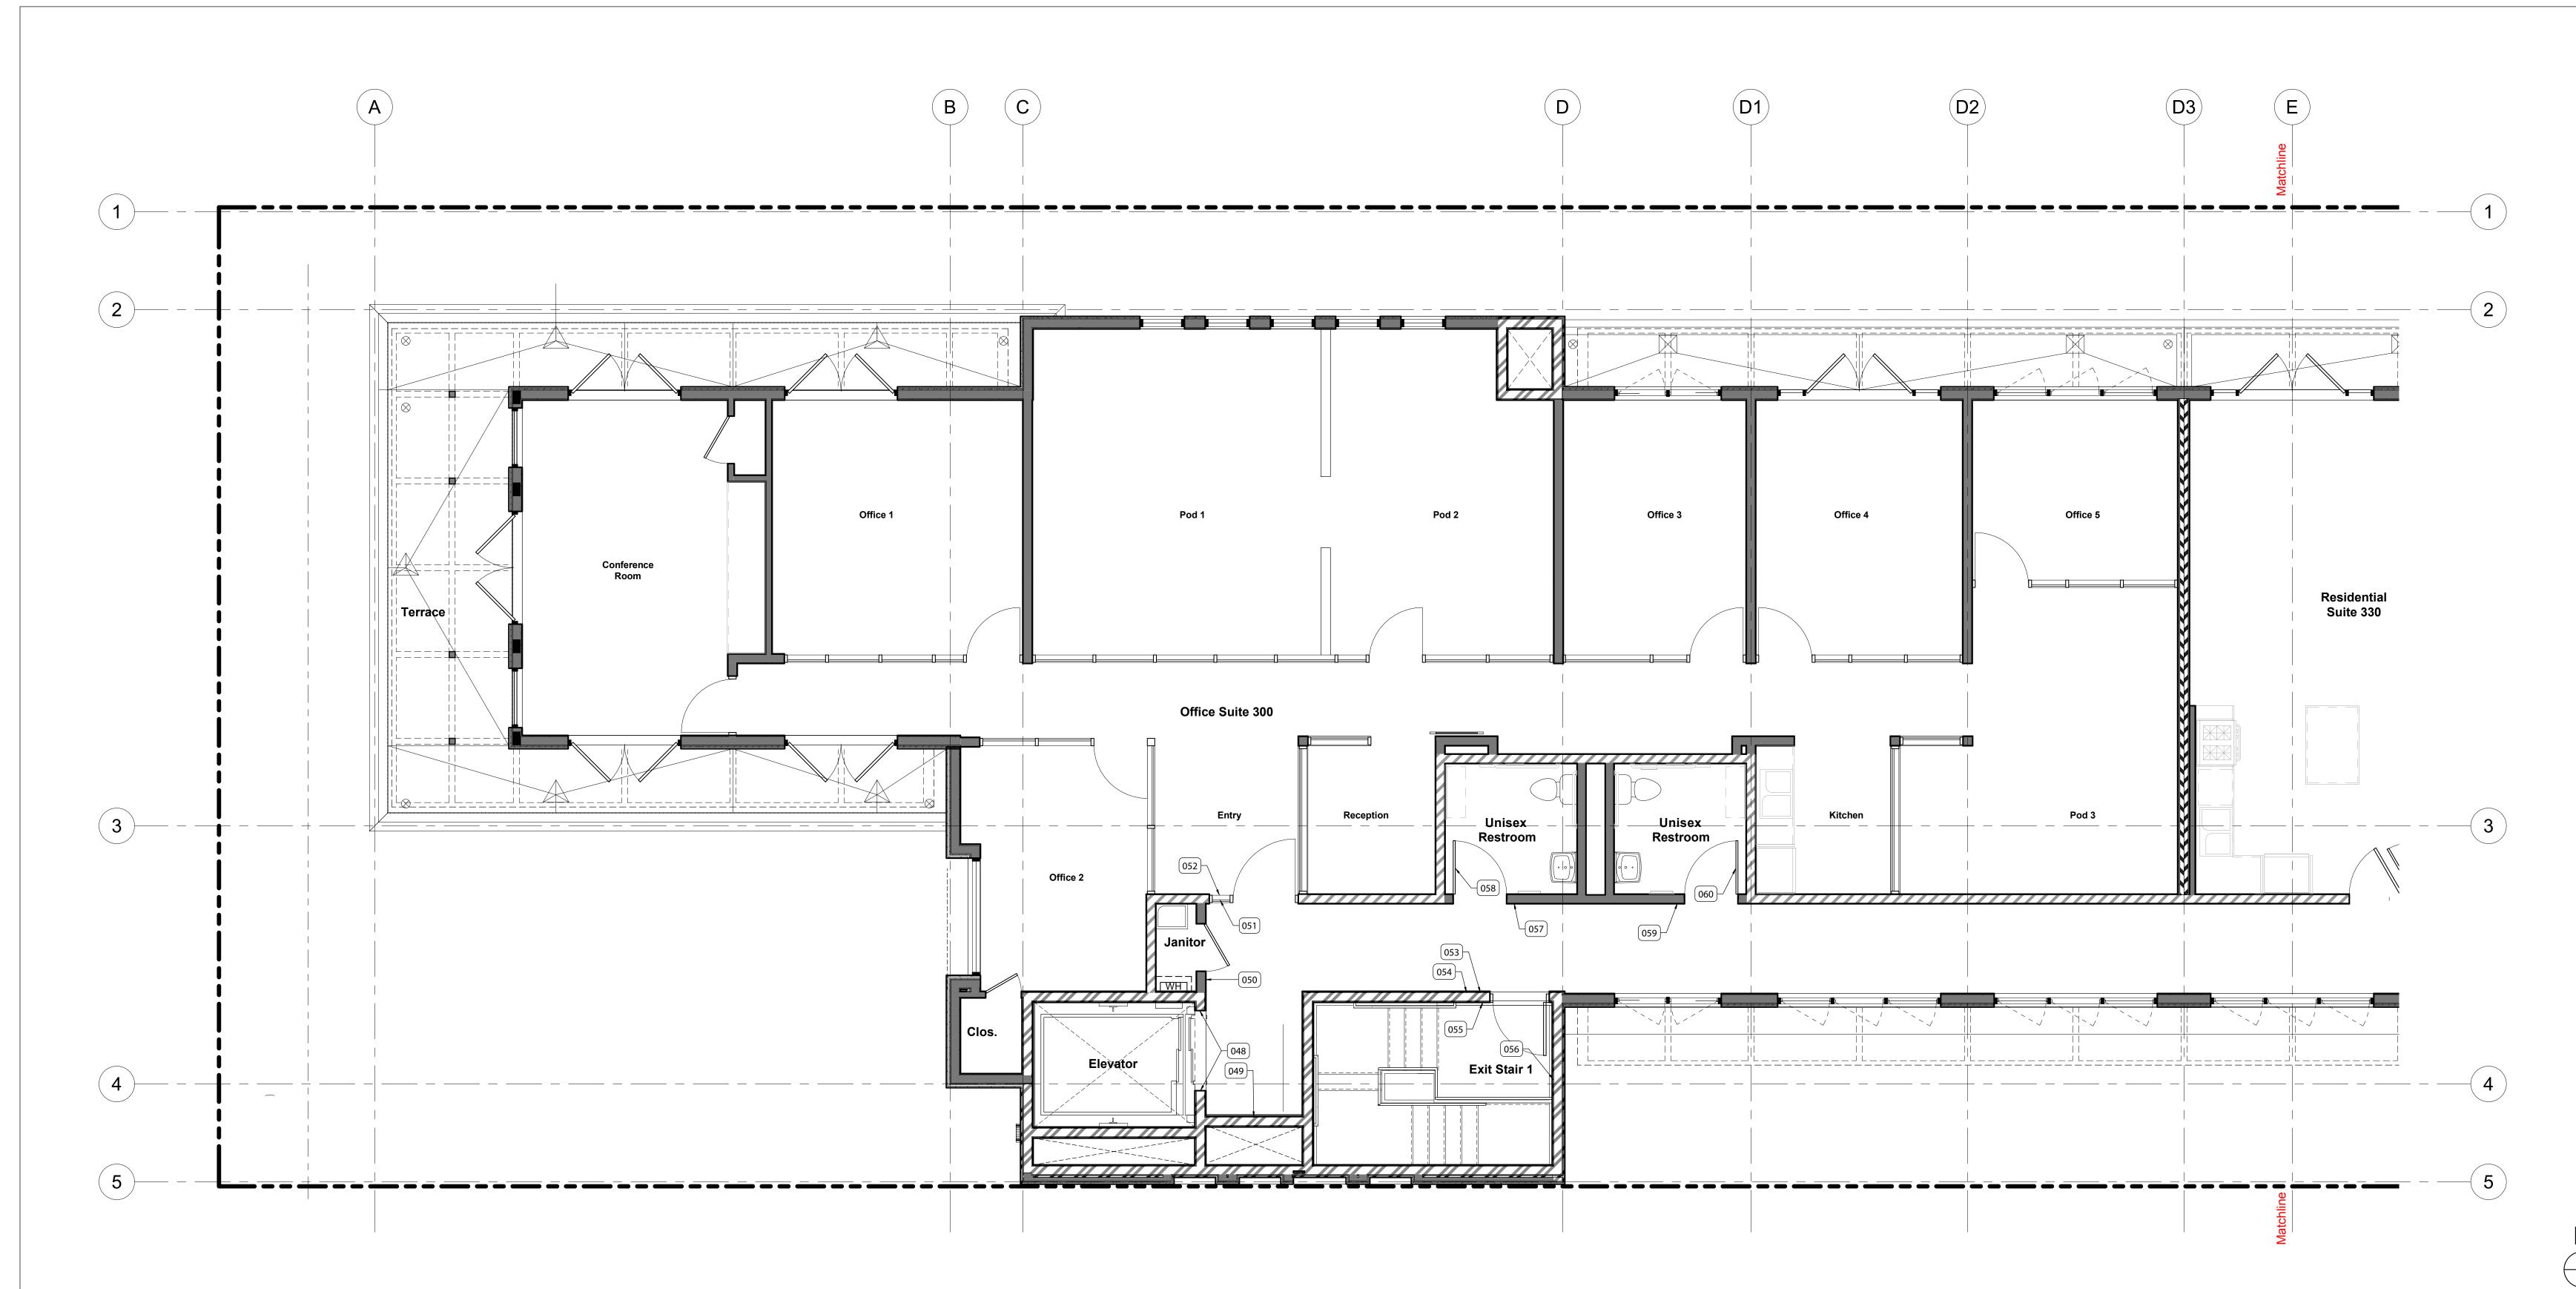

SIGN M	SIGN MESSAGE SCHEDULE				
Sign #	Sign Type	Detail	Sign Message	Notes	
048	Hoistway ID	AS-3.0/2	3		
048	Hoistway ID	AS-3.0/2	3		
049	Evacuation Plan	AS-3.0/4	IN FIRE EMERGENCY DO NOT USE ELEVATOR. USE EXIT STAIRS		
050	Room ID	AS-3.0/1	JANITOR		
051	Unit ID	AS-3.0/11	300		
052	Exit Route	AS-3.0/12	EXIT ROUTE		
053	Exit Stair Down	AS-3.0/10	EXIT STAIR DOWN		
054	Evacuation Plan	AS-3.0/4	IN FIRE EMERGENCY DO NOT USE ELEVATOR. USE EXIT STAIRS		
055	Floor ID	AS-3.0/5	3		
056	Stair ID	AS-3.0/6	STAIR 1 - NO ROOF ACCESS - 3 - B THRU 3 - EXIT DOWN TO LEVEL 1		
057	Restroom Wall	AS-3.0/8	RESTROOM		
058	Geometric Symbol	AS-3.0/9	[Triangle] on [Circle] with Wheelchair Symbol		
059	Restroom Wall	AS-3.0/8	RESTROOM		
060	Geometric Symbol	AS-3.0/9	[Triangle] on [Circle] with Wheelchair Symbol		

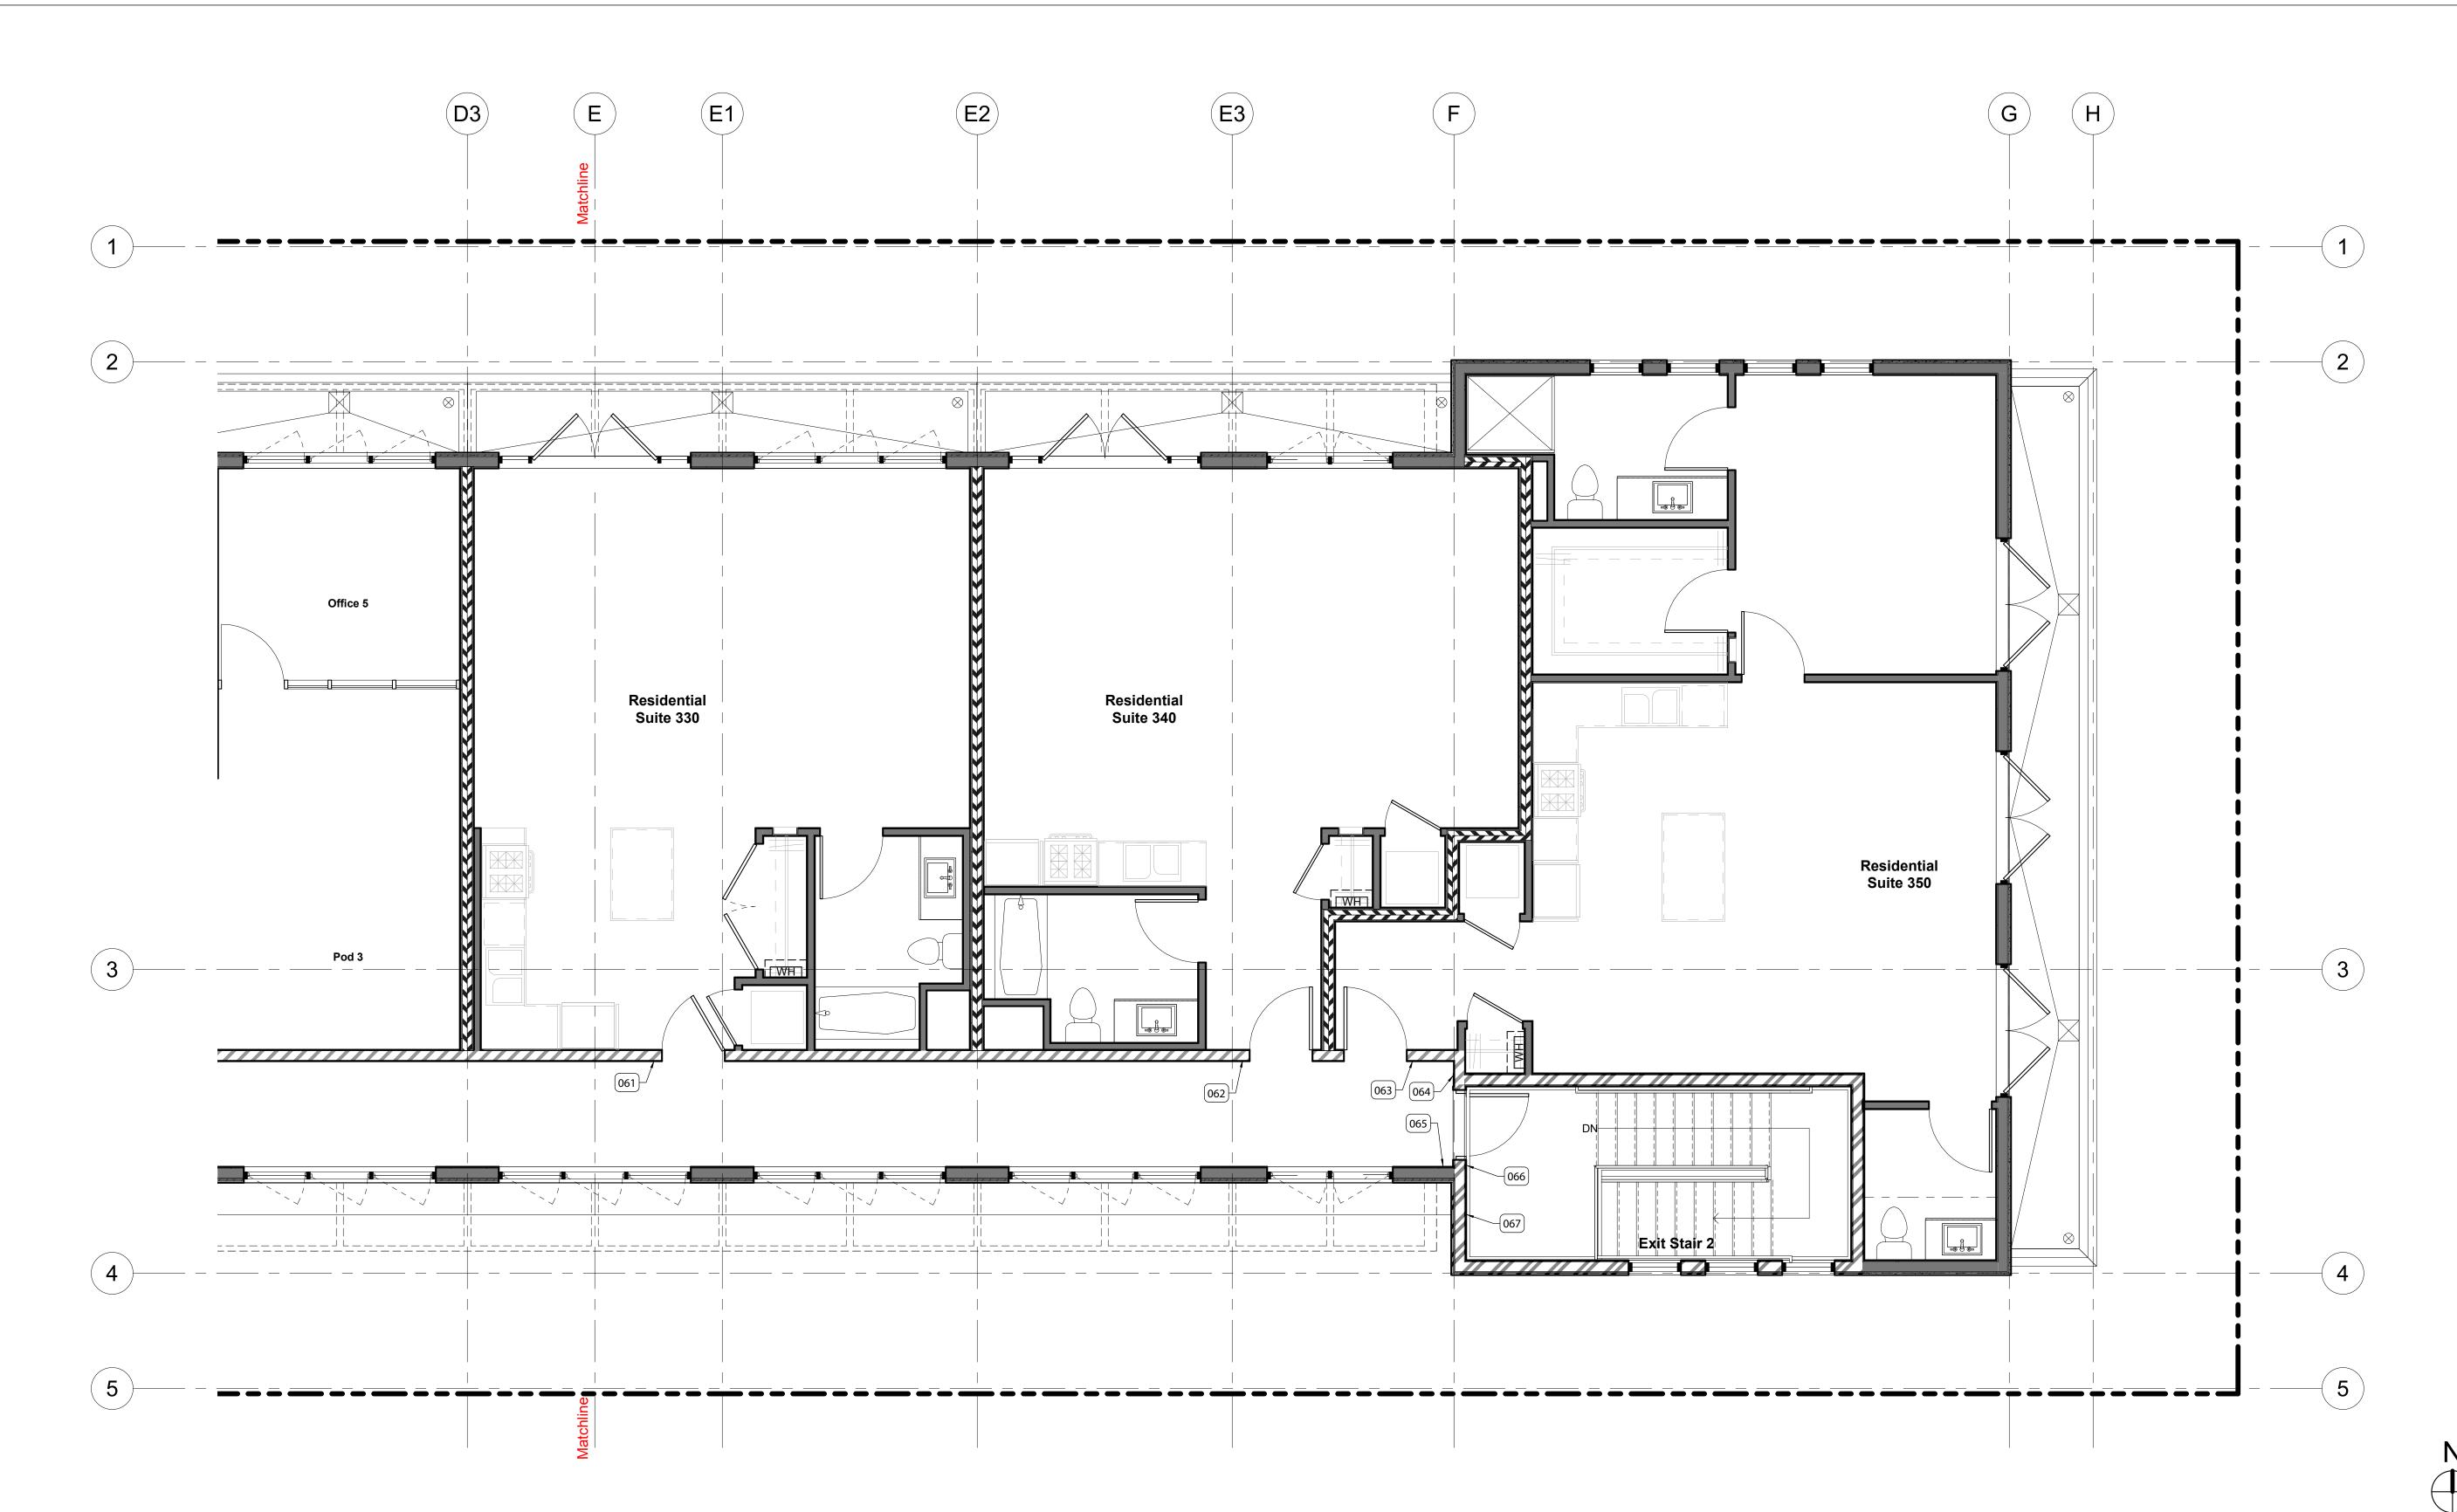

SIGN M	SIGN MESSAGE SCHEDULE					
Sign #	Sign Type	Detail	Sign Message	Notes		
061	Unit ID	AS-3.0/11	330			
062	Unit ID	AS-3.0/11	340			
063	Unit ID	AS-3.0/11	350			
064	Evacuation Plan	AS-3.0/4	IN FIRE EMERGENCY DO NOT USE ELEVATOR. USE EXIT STAIRS			
065	Exit Stair Down	AS-3.0/10	EXIT STAIR DOWN			
066	Floor ID	AS-3.0/5	3			
067	Stair ID	AS-3.0/6	STAIR 2 - NO ROOF ACCESS - 3 - B THRU 3 - EXIT DOWN TO LEVEL 1			

